

INSTALLATION

MOUNTING THE UNIT

- (1) Choose a convenient location close to water supply and not more than 5' off floor.
- (2) Remove the cover from the unit.
- (3) Hold proportioner against wall and mark keyholes — use a level for marking holes.
- (4) Drill holes and install either toggle bolts or masonry screws (not supplied).
- (5) Hang the unit and tighten screws — see Figures 1 and 2. Always refer to hardware manufacturer's specifications for weight capacity and usage.

ATTACHING THE DRIP TRAY (OPTIONAL)

- (1) Locate tray 12" to 15" below spouts. Mount in the same manner as proportioner.
- (2) Attach a length of 1/4" tubing to drip tray for draining liquids.
- (3) Divert drain tube to sink, drain, or five gallon holding jug.

CONNECTING THE WATER SUPPLY

This proportioner operates best with a flowing water pressure of 30 - 40 PSI. Fluctuating pressure can affect dilution ratios — use a water source that is not feeding other equipment whenever possible. Water temperature should be between 40°F and 180°F.

- (1) Attach male connector on high pressure supply hose to inlet side of proportioner using garden hose washer. →
- (2) Attach female connector on high pressure hose to water source.
- (3) Turn on water and check for possible leaks.

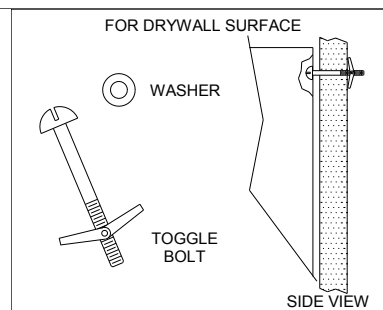


Figure 1

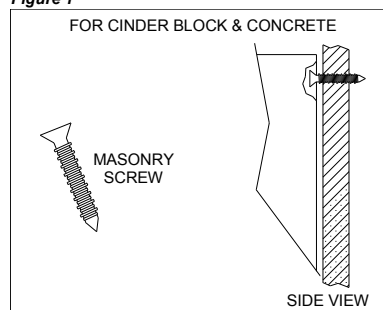


Figure 2

IMPORTANT NOTE:

If proportioner is connected to a janitor's sink with an atmospheric vacuum breaker, a special connection kit is required by A.S.S.E. specification 1055. Failure to use this kit, or equivalent connection means, will invalidate the A.S.S.E. and I.A.P.M.O. (UPC) certification. Specify P/N 7600187 when ordering the kit.



CAUTION: Wear protective clothing and eyewear when dispensing chemicals or other materials. Observe safety handling instructions (MSDS) of chemical mfrs.



CAUTION: When installing any equipment, ensure that all national and local safety and plumbing codes are met.

CHOOSING THE FLOW RATE

STANDARD VENTURI AND FLEX-GAP

For standard venturi and Flex-Gap systems, the flow rate is controlled by a venturi tube located within the venturi body. Venturi tubes have their GPM rating molded on the side, or can be identified by color; WHITE = 1 GPM/ BLACK = 4 GPM.

To change the venturi tube:

- (1) Disconnect tubing from venturi body.
- (2) Remove venturi body.
- (3) Push out existing venturi tube by inserting a pen up through the bottom of the venturi body — see Figure 3.
- (4) Insert the new venturi tube (for the desired flow rate) into the venturi body, ensuring that it seats firmly.
- (5) Thread venturi body back in place and hand-tighten.

AIRE-GAP VENTURI

For Aire-Gap venturi systems, the flow rate is controlled by a nozzle, deflector plate, and venturi tube. These internal parts are color coded to identify their GPM rating; BLUE = 1 GPM/BLACK = 3 GPM.

To change these parts:

- (1) Disconnect tubing from venturi body.
- (2) Remove Aire-Gap assembly from water valve.
- (3) Remove existing nozzle, deflector plate, and venturi tube by disassembling the Aire-Gap — see Figure 4.
- (4) Reassemble the Aire-Gap using new nozzle, deflector plate, and venturi tube (for the desired flow rate). To avoid leakage, install the rubber washer with the 3 “ears” facing upwards. Hand-tighten the venturi body to the Aire-Gap body.
- (5) Thread Aire-Gap assembly back in place and hand-tighten.

CHOOSING DILUTION RATES

IMPORTANT: The dilution chart for the standard venturi and Flex-Gap is different than the chart for the Aire-Gap venturi. Be sure to use the correct dilution chart for metering tip selection.

METERING TIP SELECTION

For each valve in the system, install appropriate metering tip from the charts on page 3. Be sure the metering tip is threaded in hand-tight only.

CALIBRATING ACTUAL PRODUCT RATIOS

To easily calculate the ounces per gallon for a specific product:

- (1) Fill a graduated cylinder or spray bottle (that has ounce markings) with product.
- (2) Install metering tip closest to desired ounces per gallon — see dilution charts.
- (3) Drop chemical pick-up tube into the container holding the product.
- (4) Activate valve until chemical line is primed up to the metering tip.
- (5) Note how many ounces (of product) are in the container.
- (6) Activate valve again, and fill a one gallon container with water/product mix.
- (7) Note how many ounces (of product) were used.
- (8) You now have determined actual ounces per gallon for this product. Repeat this procedure as desired for other valves and products.

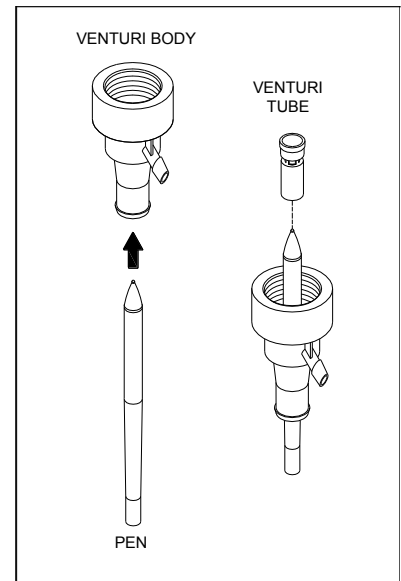


Figure 3

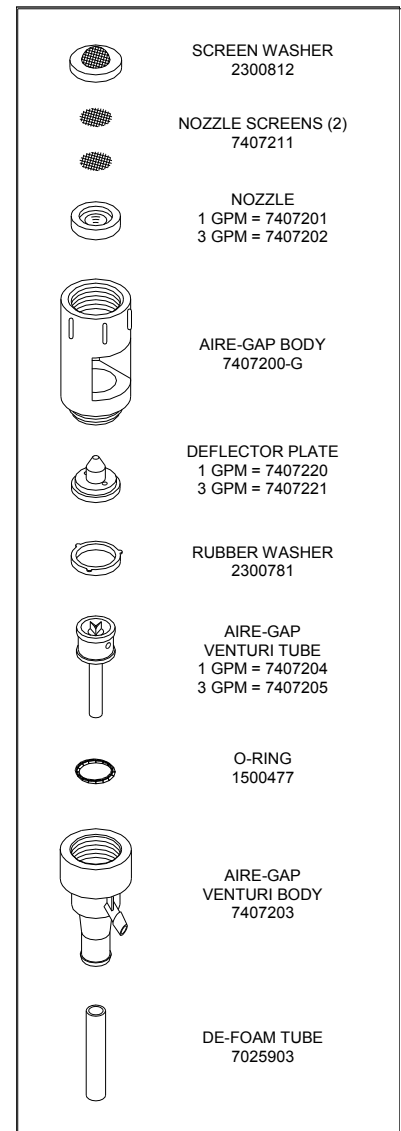


Figure 4

STANDARD VENTURI/FLEX-GAP				
TIP COLOR	1 GPM		4 GPM	
	OZ/GAL	RATIO	OZ/GAL	RATIO
NO INSERT	28	3.6:1	25	4.3:1
WHITE	22	4.8:1	20	5.4:1
YELLOW	18	6.1:1	18	6.1:1
PINK	16	7.0:1	16	7.0:1
GREEN	15	7.8:1	12	12:1
BLACK	14	8.5:1	10	15:1
BROWN	12	10:1	7	20:1
GRAY	8	15:1	5	31:1
BLUE	6	20:1	4	42:1
RED	3	42:1	3	63:1
PEACH	2.5	50:1	2	72:1
LT BLUE	2.0	63:1	1.5	101:1
PURPLE	1.75	74:1	1	127:1
LT GREEN	1.5	84:1	0.75	170:1
ORANGE	1	127:1	0.50	255:1
LT BROWN	0.5	255:1	0.25	511:1

AIRE-GAP VENTURI				
TIP COLOR	1 GPM		3 GPM	
	OZ/GAL	RATIO	OZ/GAL	RATIO
NO INSERT	35	2.7:1	21	5.1:1
WHITE	32	3.0:1	20	5.4:1
YELLOW	30	3.3:1	18	6.1:1
PINK	26	4.0:1	16	7.0:1
GREEN	23	4.6:1	12	10:1
BLACK	20	5.4:1	10	12:1
BROWN	16	7.0:1	7	17:1
GRAY	10	12:1	5	25:1
BLUE	7	17:1	4	31:1
RED	4	31:1	3	42:1
PEACH	2.5	50:1	2	63:1
LT BLUE	2.25	56:1	1.5	84:1
PURPLE	2	63:1	1	127:1
LT GREEN	1.5	84:1	0.75	170:1
ORANGE	1	127:1	0.50	255:1
LT BROWN	0.5	255:1	0.25	511:1

These charts are based upon the chemical viscosity of water (CPS = 1.0) and should only be used as a guide. Actual ratios and flow rates may vary due to product viscosity, flow pressure, and tubing distance(s).

OPERATION

CONNECTING THE CHEMICAL SUPPLY

IMPORTANT: When an Aire-Gap venturi is operating without a chemical supply line connected, or a supply line that is not completely full, water may spit from the gap area. The "spitting" is considered normal and will cease when the supply line is filled with chemical. This does not apply to standard venturi or Flex-Gap.

- (1) Locate chemical container(s) below the proportioner.
- (2) Insert the foot-valve end of the 3/8" vinyl tube into each container (use ceramic weight if necessary to sink tube to bottom).
- (3) Connect the inlet tube over the colored metering tip — secure with a plastic zip tie.

INSTALLING BUCKET-FILL TUBE (OPTIONAL)

- (1) Remove spring clip securing the unused spout in place.
- (2) Remove spout and cover remaining hole with plastic plug provided.
- (3) FOR STANDARD VENTURI AND FLEX-GAP: Connect the bucket fill tube with the flow restrictor (plastic insert) end closest to the venturi body.

FOR AIRE-GAP VENTURI: Connect a fill tube with no flow restrictor (plastic insert) or cut the restrictor off the end of an existing tube.

- (4) Secure tube to venturi body with tie wraps provided.
- (5) Route the other end out through the bottom of the case.
- (6) When not in use, hang the tube on the drip tray (optional) using the hook provided.

INSTALLING BUTTON LOCK TAB (OPTIONAL)

See Figure 5 for illustration.

- (1) Install button lock tab (provided) between the magnet stem and magnet screw.
- (2) Ensure that tab is pointing up and down as magnet screw is tightened.
- (3) Cut off tab in the slot of locking button.
- (4) Rotate button as cover is placed back on unit to line up the slot with the tab.
- (5) Button will now lock in the "on" position by turning slightly clockwise while pressed in.
- (6) Turn button counter-clockwise to release.


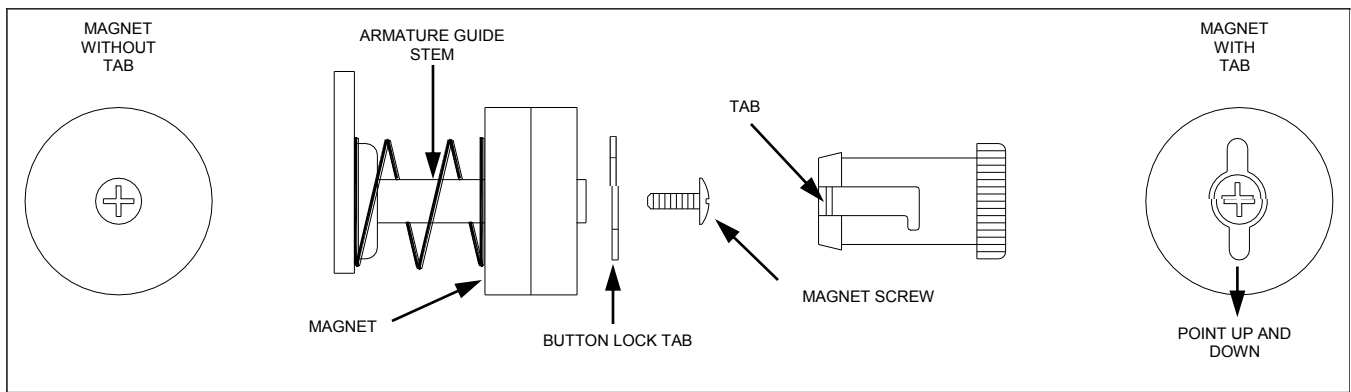


Figure 5

SAFETY AND SERVICING TIPS

- Avoid direct contact with chemicals — handle containers with caution. To avoid spillage, be careful not to tip containers.
- Insert chemical suction line into container so that footvalve and ceramic weight sink to the bottom.
- If valve fails to draw chemical, check the metering tip and footvalve for blockage — soak in warm water to clear.


TYPICAL SYSTEM WITH SPOUTS — PARTS DIAGRAM

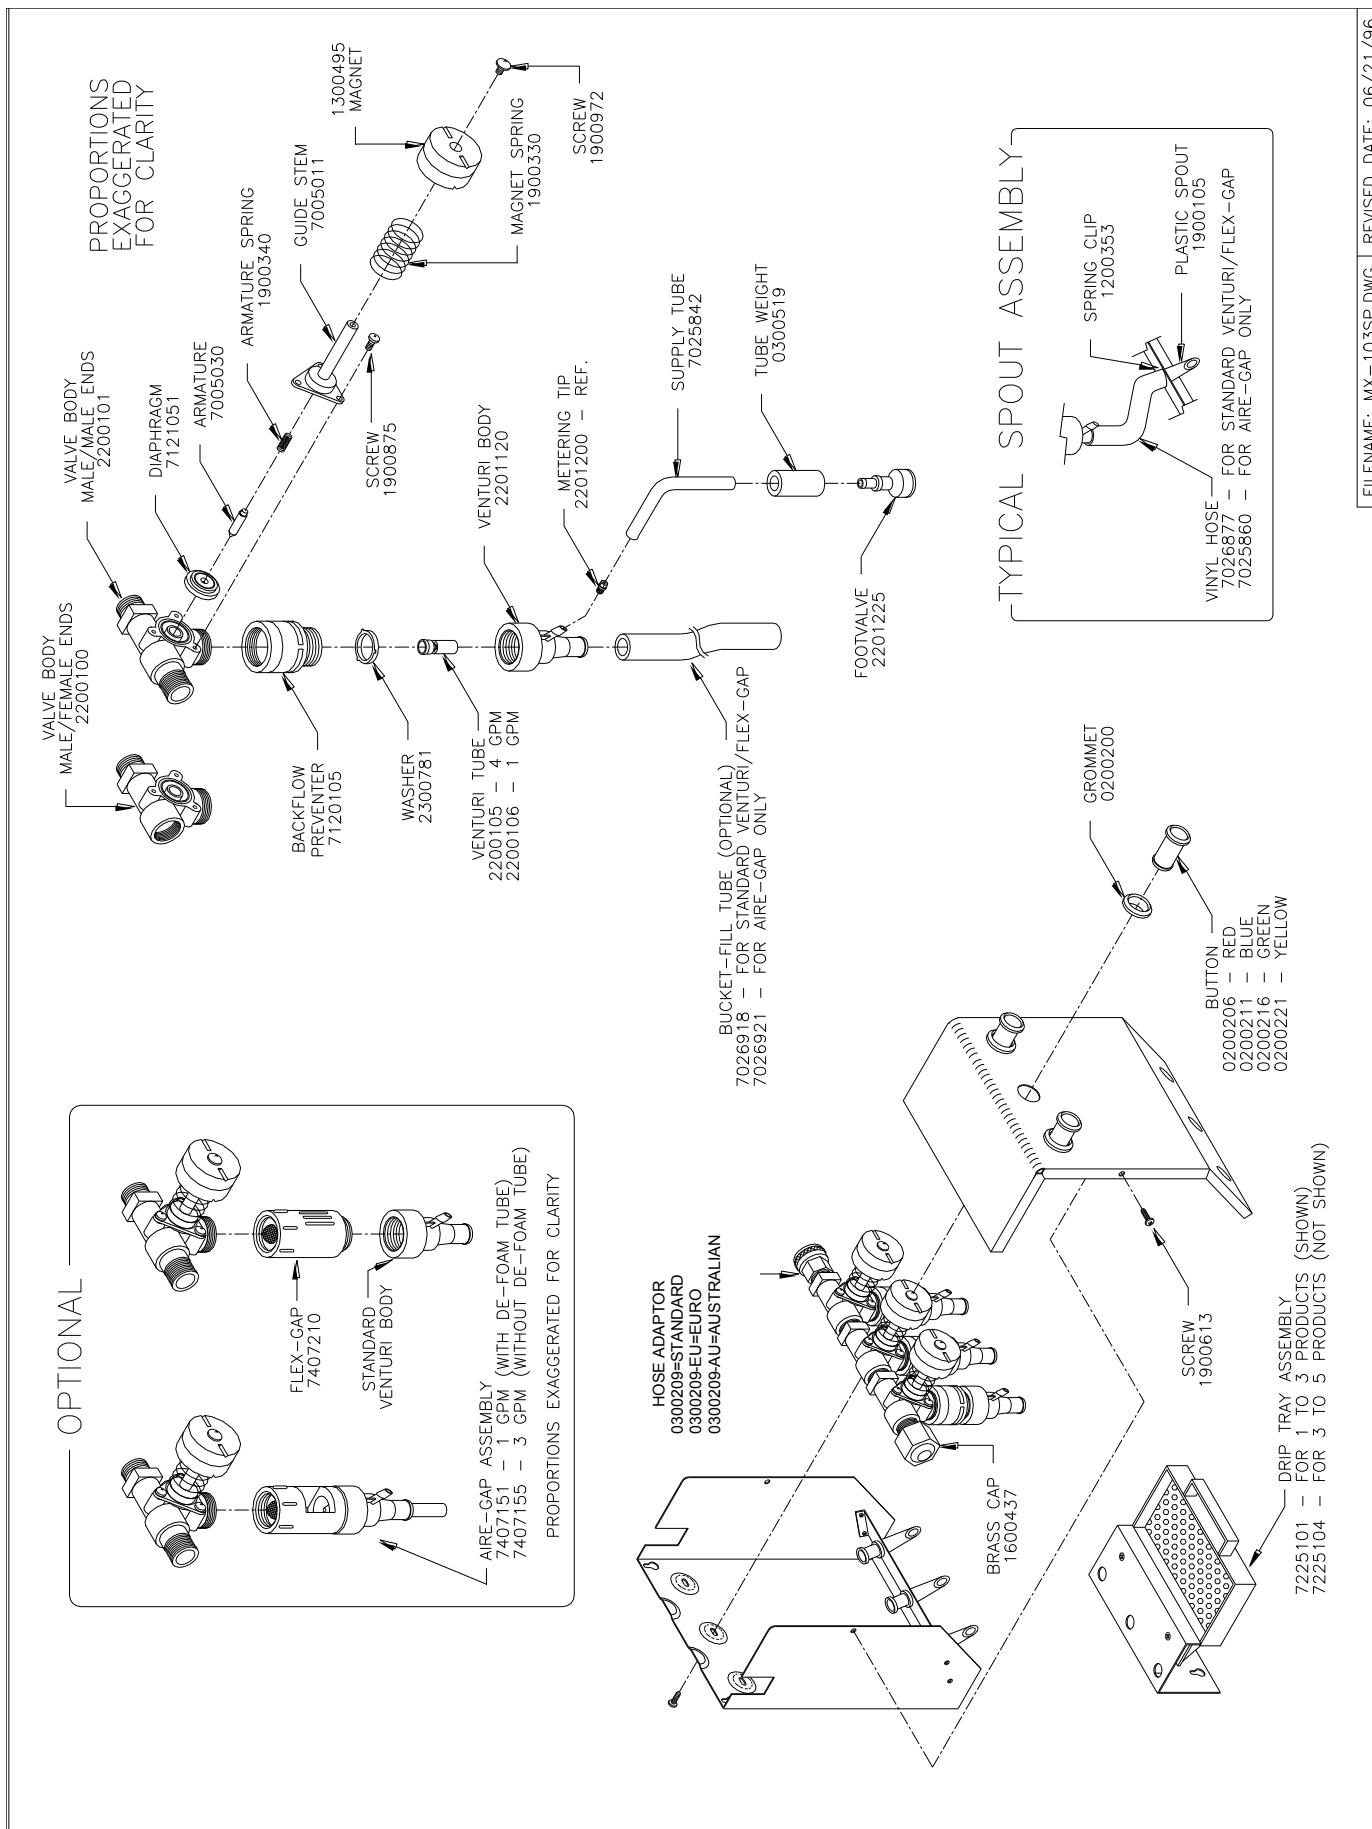

FILENAME: MX-103SP.DWG REVISED DATE: 06/21/96

TYPICAL SYSTEM WITHOUT SPOUTS — PARTS DIAGRAM

NOTE: THIS DRAWING IS PROVIDED FOR PARTS ORIENTATION.
PLEASE SEE OTHER DRAWING FOR PART NUMBERS AND
OPTIONAL ACCESSORIES.

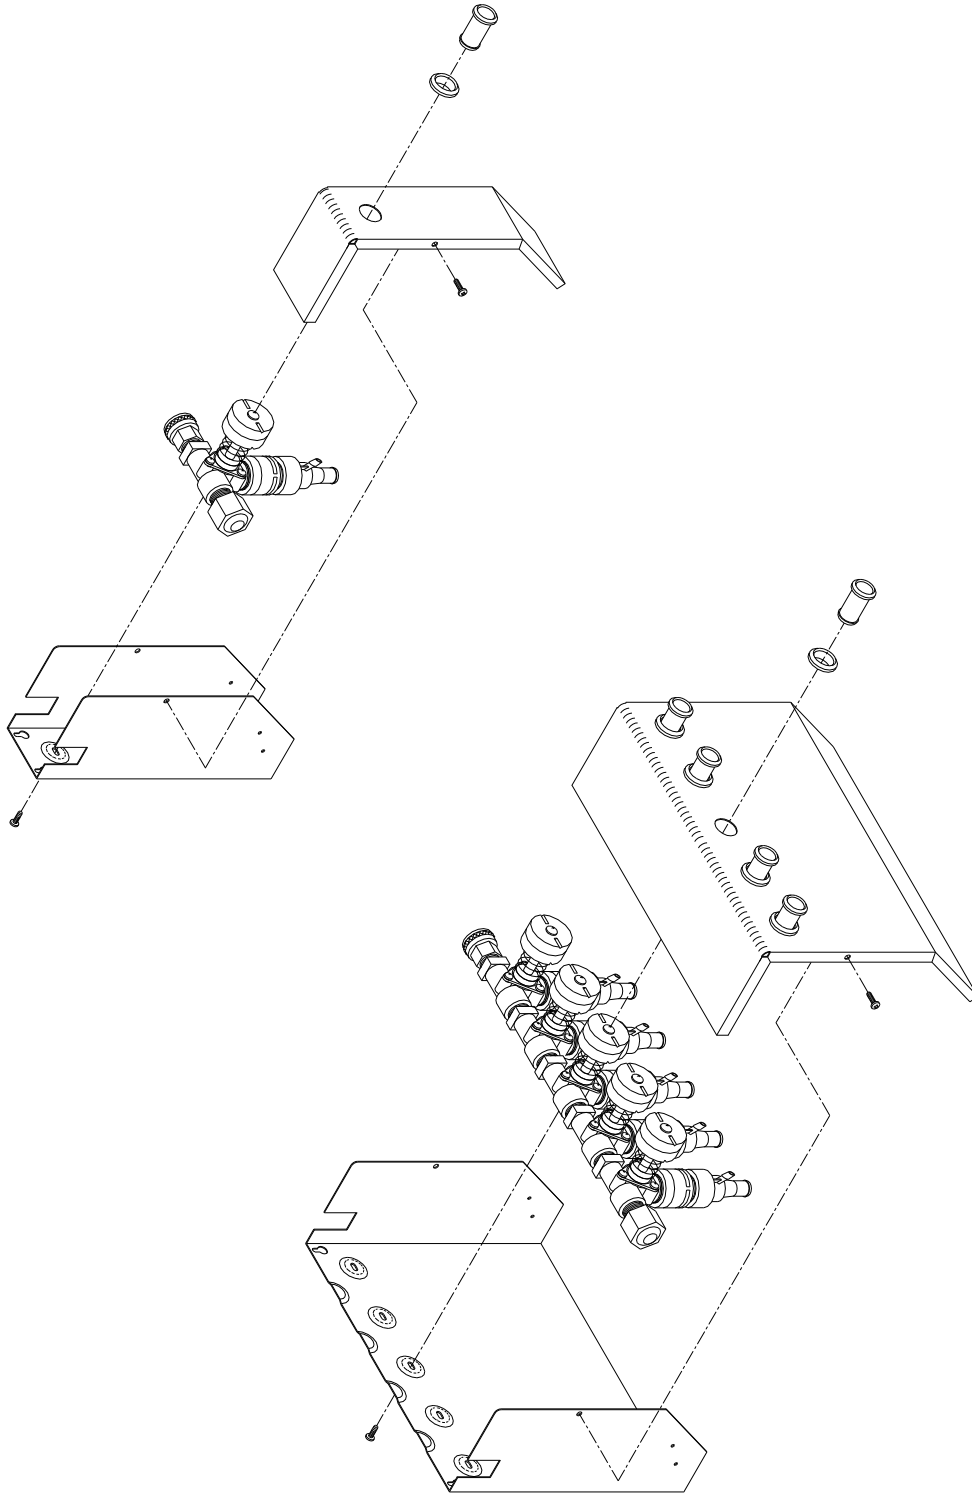

FLEX-GAP ANNUAL CLEANING AND TEST PROCEDURES FOR UNITS INSTALLED IN CANADA

Each year, your chemical dispenser must be cleaned and its backflow prevention performance verified. As this device is an end-of-line device (versus an in-line device) and evidence of effective backflow prevention is determined visually, a two-minute pressure test is not necessary.

If the Flex-Gap device cannot readily be seen during the test procedure, the housing of the chemical dispensing unit must be removed during testing. Apply the appropriate test procedure below as applicable for your chemical dispensing unit.

4 GPM VENTURIS

1. Fill discharge hose with water by opening the valve.
2. When water begins to exit the discharge hose turn off the water and raise the end of the hose above the Flex-Gap.
3. Observe that water is exiting the Flex-Gap.
4. If the water is exiting the Flex-Gap it has passed the test.
5. If the water is not exiting from the Flex-Gap, replace the Flex-Gap sleeve as per the instruction manual and re-test.
6. If the water is not exiting from the Flex-Gap after replacing the sleeve and re-testing, replace the complete Flex-Gap assembly and re-test.
7. If the water is not exiting from the Flex-Gap after replacing the Flex-Gap assembly, disconnect the water supply and replace the complete unit.

1 GPM VENTURIS

1. Remove the Fill Tube Spout and replace with a 4-foot length of 1/2" ID hose.
2. Fill the discharge hose with water by opening the valve.
3. When water begins to exit the discharge hose, turn off the water and raise the end of the hose above the Flex-Gap.
4. Observe that water is exiting the Flex-Gap.
5. If the water is exiting the Flex-Gap, it has passed the test.
6. If the water is not exiting from the Flex-Gap, replace the Flex-Gap sleeve and re-test.
7. If the water is not exiting from the Flex-Gap after replacing the sleeve and re-testing, replace the complete Flex-Gap assembly and re-test.
8. If the water is not exiting from the Flex-Gap after replacing the Flex-Gap assembly, disconnect the water supply and replace the complete unit.

DISCLAIMER

Knight LLC does not accept responsibility for the mishandling, misuse, or non-performance of the described items when used for purposes other than those specified in the instructions. For hazardous materials information consult label, MSDS, or Knight LLC. Knight products are not for use in potentially explosive environments. Any use of our equipment in such an environment is at the risk of the user, Knight does not accept any liability in such circumstances.

WARRANTY

All Knight controls and pump systems are warranted against defects in material and workmanship for a period of ONE year. All electronic control boards have a TWO year warranty. Warranty applies only to the replacement or repair of such parts when returned to factory with a Knight Return Authorization (KRA) number, freight prepaid, and found to be defective upon factory authorized inspection. Bearings and pump seals or rubber and synthetic rubber parts such as "O" rings, diaphragms, squeeze tubing, and gaskets are considered expendable and are not covered under warranty. Warranty does not cover liability resulting from performance of this equipment nor the labor to replace this equipment. Product abuse or misuse voids warranty.

FOOTNOTE

The information and specifications included in this publication were in effect at the time of approval for printing. Knight, LLC reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation whatsoever.

KNIGHT LLC (www.knightequip.com)

Knight Headquarters
Tel: 949.595.4800
fax: 949.595.4801

Knight Canada
Tel: 905.542.2333
Fax: 905.542.1536

Knight Europe
Tel: 0044.1323.514855
Fax: 0044.1323.514828

Knight N. Asia
Tel: 82.2.3481.6683
Fax: 82.2.3482.5742

Knight S. Asia
Tel: 65.6763.6633
Fax: 65.6489.6723