



Application Note

Astra™ Machina Foundation Series – PoE Hardware Connection

Abstract: This document provides guidance on establishing Power over Ethernet (PoE) connections for the Astra™ Machina Foundation Series, including required hardware, connection diagrams, and setup instructions to ensure seamless power delivery for SL-Series core modules.

Contents

- 1. Overview..... 4
 - 1.1. Scope 4
 - 1.2. Accessories Hardware Items Needed 4
 - 1.3. Connection Block Diagram 5
 - 1.4. Making the Connections 5
 - 1.5. Basic PoE Accessories..... 5
- 2. References 6
- 3. Revision History7

List of Figures

Figure 1. Overview of Astra Machina Foundation Series4

Figure 2. PoE connection block diagram.....5

1. Overview

The Astra™ Machina Foundation Series offers evaluation-ready kits that facilitate quick and straightforward prototyping with the Synaptics SL-Series of embedded Linux® and Android™ processors. Featuring a modular design, these kits include interchangeable core compute modules, a standard I/O board and daughter cards for connectivity, debugging, and various I/O configurations. Furthermore, the Astra Machina Foundation Series is equipped with Power over Ethernet (PoE) support.

1.1. Scope

This document provides a clear PoE connection diagram that is suitable for all SL-Series core modules: SL1680, SL1640, SL1620, and SL2610. This ensures that the Astra Machina Foundation Series can receive power via PoE.

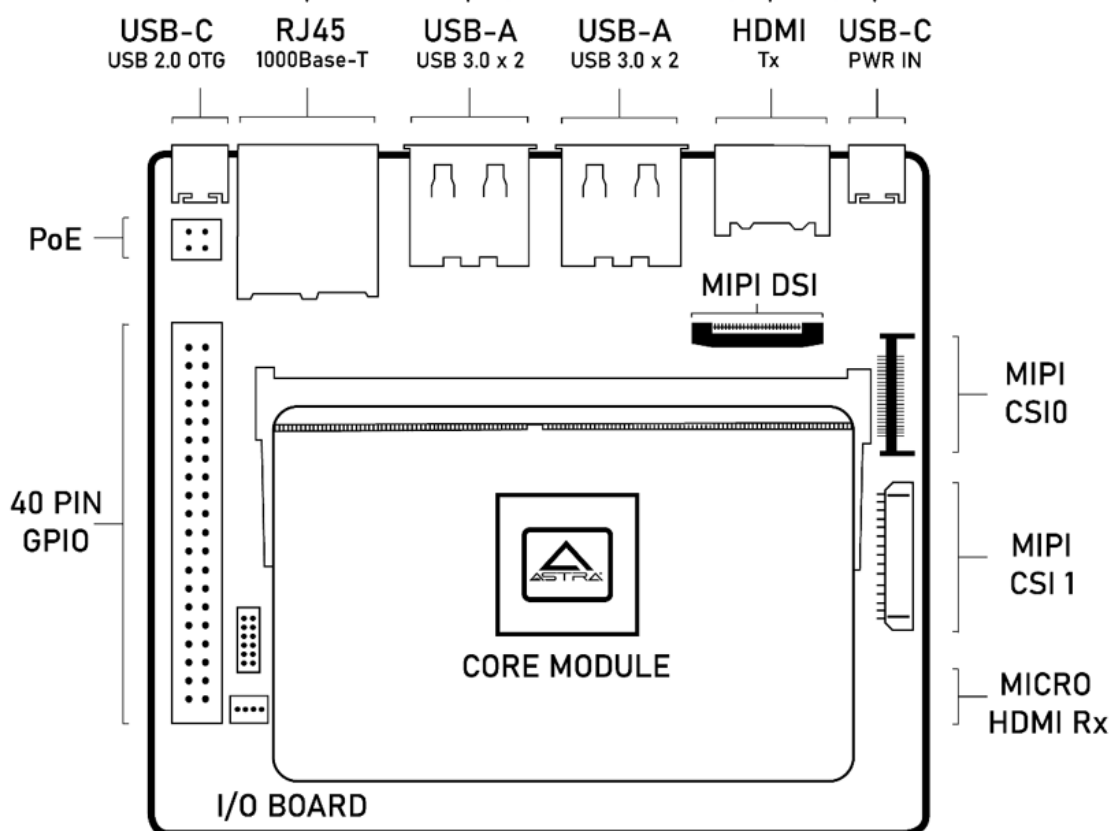


Figure 1. Overview of Astra Machina Foundation Series

1.2. Accessories Hardware Items Needed

- [a] Astra Machina Foundation Series
- [b] Power Sourcing Equipment (PSE) switch distributes power
- [c] PoE HAT, 802.3af/at PoE/+
- [d] Ethernet cables and jumper wires
- [e] Laptop or desktop computer with terminal emulator software

1.3. Connection Block Diagram

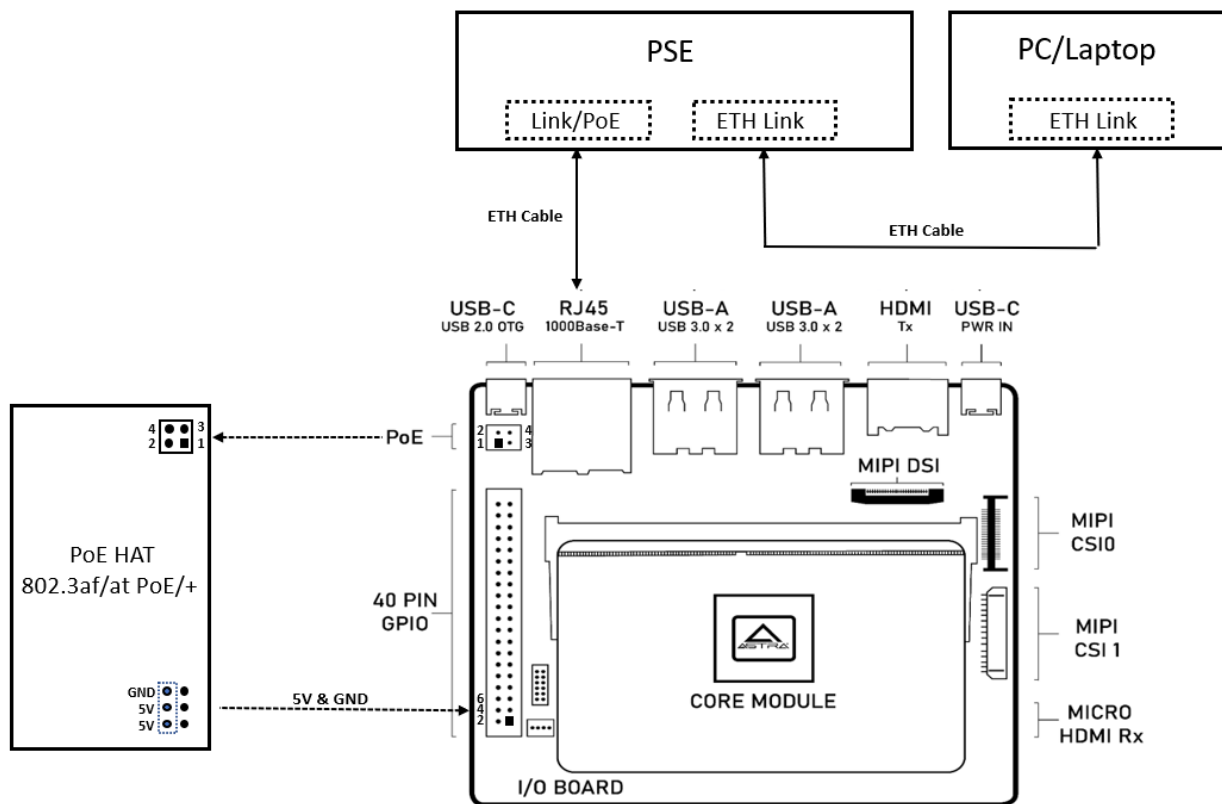


Figure 2. PoE connection block diagram

1.4. Making the Connections

- Connect an Ethernet cable from a laptop or desktop computer equipped with terminal emulator software to the Ethernet uplink port of the PSE.
- Connect an Ethernet cable from any of the PoE & Switch ports on the PSE to an RJ45 port on the Astra Machina Foundation Series.
- Connect four jumper wires with 1-pin to 1-pin, featuring 100-mil spacing headers on both ends, from the PoE port of the Astra Machina Foundation Series to the PoE HAT.
- Connect three jumper wires, each with 1-pin to 1-pin, featuring 100-mil spacing headers on both ends, from J32-2,4,6 (corresponding to 5V, 5V, and GND respectively) on the 40-pin header of the Astra Machina Foundation Series to the specified location on the PoE HAT, as shown in [Figure 2](#).

1.5. Basic PoE Accessories

- BV-Tech 6 Port PoE+ Switch (4 PoE+ Ports with 2 Ethernet Uplink and Extend Function) – 60W
- UCTRONICS PoE HAT module: UCTRONICS PoE HAT for Raspberry Pi 4B/3B+, PoE Support 802.3af PoE Network Standard, Compatible with Pi 4B / 3B+

2. References

- *Astra Machina Foundation Series Quick Start Guide* (PN: 511-001404-01)
- *Astra Machina SL1620 Developer Kit User Guide* (PN: 511-001407-01)
- *Astra Machina SL1640 Developer Kit User Guide* (PN: 511-001405-01)
- *Astra Machina SL1680 Developer Kit User Guide* (PN: 511-001403-01)
- *Astra Machina SL2610 Developer Kit User Guide* (PN: 511-001453-01)

3. Revision History

Revision	Description
1	Initial release
A	Minor update to latest template and release as production.
B	Updated to include SL2610.



Copyright

Copyright © 2024–2025 Synaptics Incorporated. All Rights Reserved.

Trademarks

Synaptics, Astra, and the Synaptics logo are trademarks or registered trademarks of Synaptics Incorporated in the United States and/or other countries.

Android is a trademark of Google LLC. Linux is the registered trademark of Linus Torvalds in the U.S. and other countries. All other trademarks are the properties of their respective owners.

Contact Us

Visit our website at www.synaptics.com to locate the Synaptics office nearest you.

PN: 506–001501–01 Rev B

Notice

Use of the materials may require a license of intellectual property from a third party or from Synaptics. This document conveys no express or implied licenses to any intellectual property rights belonging to Synaptics or any other party. Synaptics may, from time to time and at its sole option, update the information contained in this document without notice.

INFORMATION CONTAINED IN THIS DOCUMENT IS PROVIDED “AS-IS,” AND SYNAPTICS HEREBY DISCLAIMS ALL EXPRESS OR IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND ANY WARRANTIES OF NON-INFRINGEMENT OF ANY INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT SHALL SYNAPTICS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OF THE INFORMATION CONTAINED IN THIS DOCUMENT, HOWEVER CAUSED AND BASED ON ANY THEORY OF LIABILITY, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, AND EVEN IF SYNAPTICS WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. IF A TRIBUNAL OF COMPETENT JURISDICTION DOES NOT PERMIT THE DISCLAIMER OF DIRECT DAMAGES OR ANY OTHER DAMAGES, SYNAPTICS’ TOTAL CUMULATIVE LIABILITY TO ANY PARTY SHALL NOT EXCEED ONE HUNDRED U.S. DOLLARS.